

DuPont™ Thermax™ Brand Insulation

Distinguished among the competition



DuPont™ Thermax™ outperforms the industry’s other polyisocyanurate (“polyiso”) insulations. With 16 patents on its unique performance and innovation since 1975, Thermax™ surpasses industry competition for fire resistance^[1], dimensional stability^[2], flashing options, facer variety, R-Value^[3], system warranty, and more.

Glass Fiber Reinforced Core

DuPont™ insulations have expanded fiberglass throughout the foam core, not just in one layer. This makes it less friable, gives it better fire resistance since it will char before burning, and results in superior dimensional stability. Because of the even

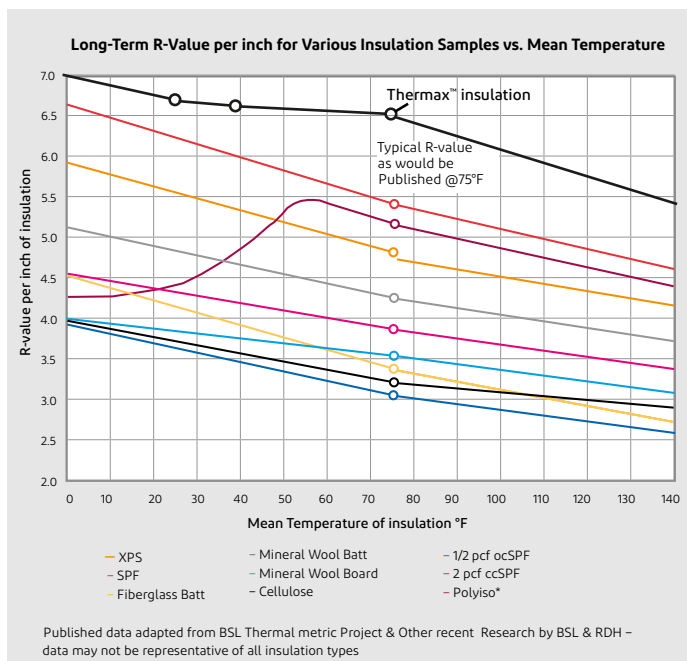


Figure 1. Common representation of Selected Insulation R-values as a function of Mean Temperature with Thermax™ Brand Insulation properties added.

dispersion of glass fibers throughout the foam core, DuPont™ Thermax™ will perform better in “kerf cut” (curved) applications, allowing for maximum design flexibility.

Fluid Applied Flashing / Joint Treatment

DuPont™ LiquidArmor™ Flashing and Sealant, available in acrylic sprayable formula (CM) as well as trowel-able silicone formulation (LT), makes sealing the board joints fast than with tape, and eliminates issues that often accompany tape application (gaps, wrinkles, etc.).


Superior R-Value

From room temperature to the lower temperature range of 20°F, DuPont™ Thermax™ Brand Insulation gains R-Value at lower mean temperatures, unlike other types of polyisocyanurate insulations that have been reported to lose significant R-Value in third party studies (see Figure 1 below). See Tech Solution 538.0 for more information.

Choose the Best DuPont™ Thermax™ Product for Your Project

DuPont™ Thermax™ Brand insulations have a wide variety of facers to meet the needs of your diverse range of projects. Choose products for interior / exterior, exposed / covered, robust / economic applications.


- DuPont™ Thermax™ XARMOR™ CI 4 mil gray facer
 - Exterior continuous insulation
 - Used in Thermax™ Wall System



- DuPont™ Thermax™ CI 1.25 mil blue facer
 - Exterior continuous insulation
 - Used in DuPont™ Thermax™ Wall System



- DuPont™ Thermax™ Sheathing 1 mil smooth facer
 - Multi-purpose



- DuPont™ Thermax™ Heavy Duty 4 mil white facer
 - Interior insulation & finish



System Warranty

Projects using the DuPont™ Thermax™ Brand Wall System can be registered for our System Warranty. This market leading warranty reduces your risk by covering the elements: thermal performance, water resistance, and UV exposure. Warranties are unique to each project, listing project owner, address, date of warranty issuance, and distinct warranty number.


¹DuPont™ Thermax™ is the only polyiso with FM 4880 approval in the corner burn test that allows you to leave Thermax™ exposed to the interior without thermal barrier in both ceiling and wall application for Factory Mutual Insured Buildings. DuPont™ Thermax™ has also passed UL 1715 and NFPA 286 for use on interior walls AND ceiling without thermal barrier.

²DuPont™ Thermax™ has 20x better dimensional stability: 0.1% movement per length vs. 2% standard acceptance per ASTM D2126.

³DuPont™ Thermax™ outperforms tested R-values of typical generic polyisocyanurate foam down to 20°F per ASTM C518.

NFPA 285 Approved Assemblies

Today, DuPont strives to make it easier for designers to insulate walls with continuous insulation to meet IBC and ASHRAE for energy efficient assemblies and to pass fire tests like ASTM E84 and NFPA 285 per IBC Chapter 26. There are many NFPA 285 approved assemblies using DuPont™ Thermax™ insulation, including use with MCM, Metal Panels, and High Pressure Laminate veneers. Try out our Wall Builder tool to begin your design: building.dupont.com

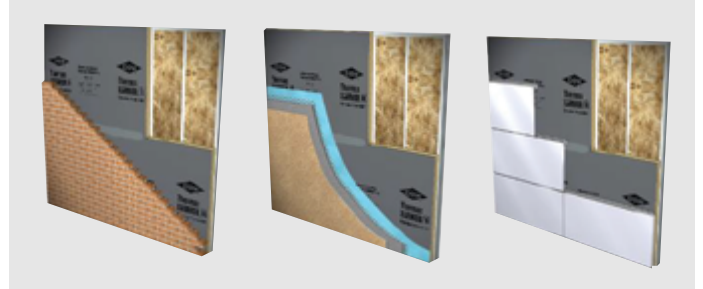

Can other polyisos compare?

	Expanded Fiberglass Throughout Foam Core	Class A (ASTM E84) for All Sizes & Facers	Widest Range of NFPA 285 Assemblies	Only Polyiso with Corner Burn Test for BOTH Wall and Ceiling	Higher R-Value	Fluid Applied Joint Sealer	Widest Variety of Facers	Best in Class System Warranty	Better Dimensional Stability
DuPont™ Thermax™	✓	✓	✓	✓	✓	✓	✓	✓	✓



For more information visit
building.dupont.com
 or call 1-866-583-2583

NOTICE: No freedom from any patent owned by DuPont or others is to be inferred. Because use conditions and applicable laws may differ from one location to another and may change with time, Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other government enactments. The product shown in this literature may not be available for sale and/or available in all geographies where DuPont is represented. The claims made may not have been approved for use in all countries or regions. DuPont assumes no obligation or liability for the information in this document. References to "DuPont" or the "Company" mean the DuPont legal entity selling the products to Customer unless otherwise expressly noted. NO EXPRESS WARRANTIES ARE GIVEN EXCEPT FOR ANY APPLICABLE WRITTEN WARRANTIES SPECIFICALLY PROVIDED BY DUPONT. ALL IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. The buyer assumes all risks as to the use of the material. Buyer's exclusive remedy or any claim (including without limitations, negligence, strict liability, or tort) shall be limited to the refund of the purchase price of the material. Failure to strictly adhere to any recommended procedures shall release DuPont Specialty Products USA, LLC or its affiliates, of all liability with respect to the materials or the use thereof. The information herein is not intended for use by non-professional designers, applicators or other persons who do not purchase or utilize this product in the normal course of their business.

BEFORE HANDLING OR USING THIS PRODUCT, READ AND UNDERSTAND THE MATERIAL SAFETY DATA SHEET. For MSDS & product information call your local Dow representative. In an emergency call 1-989-636-4400.

DuPont™, the DuPont Oval Logo, and all products, unless otherwise noted, denoted with ™, SM or ® are trademarks, service marks or registered trademarks of affiliates of DuPont de Nemours, Inc.

43-D100649-enUS-1119 CDP